 


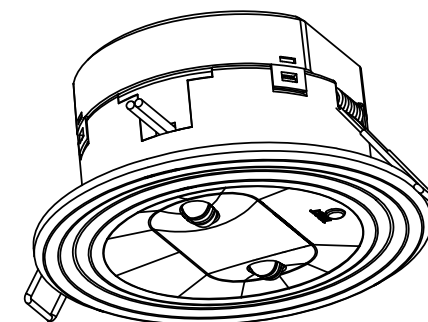


Explanations

	Maintained	Non-maintained	Switched maintained		
				OK	
				Emergency mode	
				Failure - Battery Charge	



Recessed LED Downlight Caution: The luminaires are not suitable for covering with thermally insulated material.

 Photometric

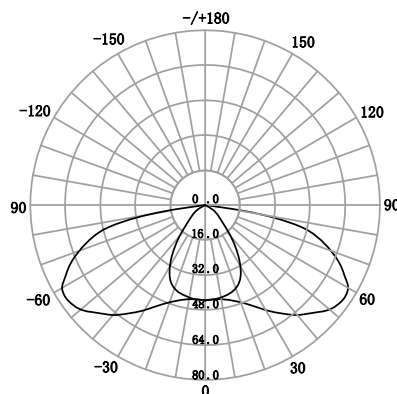

EMD Narrow Lens (Path Way)

PrimEvo RS100E

Instruction Leaflet

ABB B.V
 Bruntcliffe Lane
 Morley, Leeds
 W.Yorkshire LS27 9LL, United Kingdom

Telephone +44 (0) 113 281 0600
 Sales +44 (0) 113 281 0610
 Fax +44 (0) 113 281 0601
 Email LV.enquiries@gb.abb.com

 
 
Note: We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders and/or contracts, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilisation of its contents - in whole or in parts - is forbidden without prior written consent of ABB.

Copyright © 2017 ABB
 All rights reserved

Technical Specifications

Power Supply : 220-240VAC, 50 Hz
 Power Consumption : Max. 4.5W
 Operation : Maintained or Non-maintained
 Function : Manual test
 Duration : Discharge 3H
 Charge time : 24h
 Protection grade : IP20
 Emergency lumens output : 3H/120lm
 Light distribution : Path way (Standard)

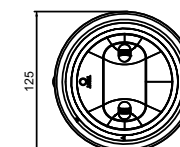

140

Carefully read this instruction leaflet before installing or using the luminaire. This leaflet provides important information about the correct installation, use, maintenance and disposal of this product.

Please observe the following guidelines:

1. The luminaire should only be installed by qualified personnel. Installation must be in accordance with European installation requirements HD 60364 and additional local regulations.
2. This product may not be modified in any way what so ever or used for a purpose or in an environment other than for which it is designed. Failing to observe these guidelines will invalidate the warranty and the CE-compliance of this product.
3. The luminaire is suitable for indoor use only
4. Before installing the luminaire, the supply must be isolated.
5. The light source in this luminaire is non-replaceable.

INSTALLING AND CONNECTING

The luminaire should be connected to the voltage equivalent to that indicated on the type label. The surface mounted luminaire is fitted with a terminal block suitable for loop-in-loop-out connection. For further information on the different connection possibilities, see the instructions in this instruction leaflet.

CAUTIONS

The luminaire will, under no circumstances, be covered with insulating material or similar material only current style

Replace the battery when the battery no longer meets its rated duration of operation (see the label of battery replacing) .

GENERAL INFORMATION

LED emergency light, down light style, self-contained lighting, for pathway and door light used optional. LED light source provides low power consumption and long life. Enclosure is made by polycarbonate, recessed mounting or surface mounting.

PRECAUTIONS

This product should be installed by a registered electrician in accordance with local standards and electrical regulations. Take care to ensure the mains supply is isolated before installation. Check the unit label for correct supply voltage and frequency.

SERVICE AND OPERATION

Normal Operation: The green indicator light on the bottom unit stays on.

The LED will go out if the mains supply fails, if the internal charger is malfunctions, or if the unit is in test mode. The fixture must be charged for 24 hours after installation.

Battery: Sealed Nickel-Cadmium rechargeable battery pack. Batteries of a different type must not be used. Batteries should be replaced by authorised service personnel only. If the unit no longer maintains its rated battery backup test times. Should only be replaced by competent service personnel with manufacturers battery pack. Old Battery's should be recycled.

Test Switch: If pressed the test switch, LED indicator will go out and the fixture will operate from its battery supply.

 
PLEASE NOTE!

Constant voltage is required and the batteries must be sufficiently charged for emergency lighting to function properly. Failure to observe this requirement can damage the batteries, the light source or in worst-cast scenario. the luminaires electronics.


INSPECTION AND MAINTENANCE

The company strongly advises annual inspection of your emergency lighting installation.


INSTALLATION

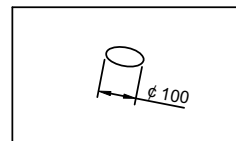

 
- ① Cut out mounting hole in ceiling, hole dimension is 100mm.

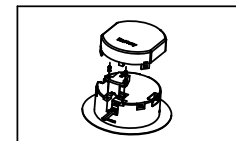

 
- ② Remove battery pack from housing, remove cable locker.

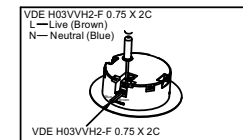

 
- ③ Feed the power cable through the mounting hole and connect to terminal block on fixture.

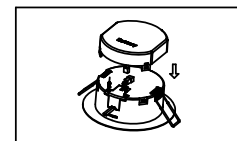

 - ④ Fixed cable locker. Connect battery connector, Snap battery pack on housing.

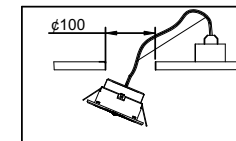

 - ⑤ Snap fixture with spring into mounting hole.

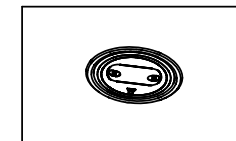

- ⑥ Press the test switch, indicator will go out, emergency light will light on.

TECHNICAL INFORMATION

Model Number	Input Voltage	Charge Duration	Discharge Duration	Operation	Battery	Power
PrimEvo RS100E	220-240V~ 50Hz	24h	3 h	Maintained Non-maintained	Ni-Cd,7.2V 1000mA	M: 2.9W NM: 1.6W

Maintained and Non-maintained function

- Maintained : Assemble wire connector
- Non- maintained : Disassemble wire connector

